

# WARING PRO™

## PROFESSIONAL DOUBLE WINE CHILLER/WARMER



PC200 Series

For your safety and continued enjoyment of this product,  
always read the instruction book carefully before using.

# WINE CHILLER/WARMER

Our Double Wine Chiller/Warmer has two separate internal databases of 33 red, white and Champagne wines. Simply select your wine from the backlit LCD screen and the chilling or warming begins. You'll always know when your wine is ready because an alarm alerts you when it has reached the optimum serving temperature.

The Wine Chiller/Warmer has been thoroughly tested to be certain it meets our own **exacting quality control standards**. Please take a few moments to review the following **important information** before using the Wine Chiller/Warmer. **Serve wine at the perfect temperature – every time!**

# IMPORTANT SAFEGUARDS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

## WARNING

1. Close supervision is necessary when this unit is used by or near children.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air opening of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by cord or use cord as handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.

# DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug the unit from the electrical outlet immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store unit where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for unit that has fallen into water. Unplug it immediately.
6. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

# CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. THERE ARE NO USER-SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO WATER OR MOISTURE.

 


The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

# LOCATION OF CONTROLS AND INDICATORS

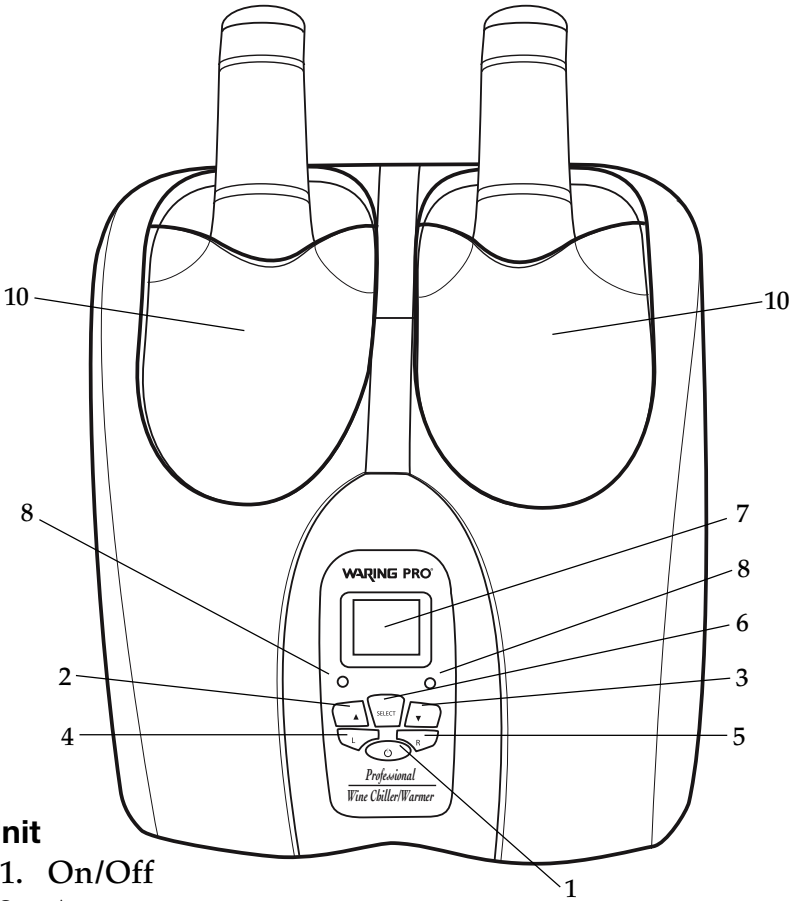

## Unit

 
1. On/Off
2. ▲
3. ▼
4. Left Chilling/Warming Chamber Control
5. Right Chilling/Warming Chamber Control
6. Select
7. LCD Display  
– will display ENJOY at end of chilling/warming cycle
8. Ready Indicator Lights
9. Power Adapter
10. Plastic Sleeve

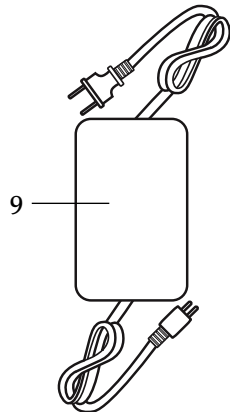

# WINE CHILLER/WARMER OPERATION

## Using the Wine Chiller/Warmer

 1. Insert one end of the power adapter into the Wine Chiller/Warmer (make sure adapter is securely in place) and plug the other end into an electrical outlet.
2. Insert wine or champagne bottle into the left or right side aluminum reservoir.
3. Raise the plastic sleeve to cover the bottle.
4. Press  $\phi$  On/Off until the display illuminates blue.
5. Press L or R for left or right chilling/warming chamber.
6. Press SELECT to enter the Wine Library.
7. Press Up/Down keys to select red wine, white wine or Champagne.
8. Press SELECT again, then press  $\blacktriangle$  or  $\blacktriangledown$  to select your specific wine or Champagne.
9. Press SELECT again and cooling or warming begins. The LCD indicator display is set up to show the left and right side preset temperatures and status (using the bar graph).
10. When cooling/warming process has been completed, LCD will display ENJOY ! and a full bar graph.
11. After the cooling/warming process has been completed, the unit will cycle off for approximately 3 minutes and then will automatically resume the cooling/warming process to maintain the preset temperature. See conditions below.

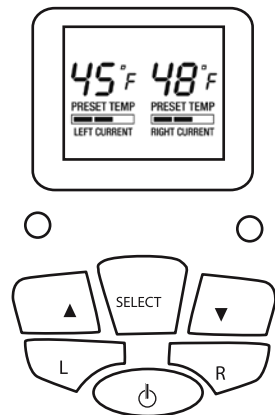

**Two conditions remain:**

1. The bottle is left in the unit over a period of time.  
The wine chiller/warmer will cycle to maintain the preset temperature, which means the current temperature will fluctuate slightly within 3 to 4 degrees.
2. If the bottle is removed from the wine chiller/warmer and then put back into it after a few minutes, it will automatically start chilling/warming to the preset temperature until the unit is turned off.

<b>Approximate Chilling/Warming Times</b>		
	<b>Preset Temperature</b>	<b>Time</b>
<b>Red Wine</b>	<b>64°F</b>	<b>24 minutes</b>
<b>White Wine</b>	<b>48°F</b>	<b>75 minutes</b>
<b>Champagne</b>	<b>45°F</b>	<b>95 minutes</b>

\* Actual cooling time will depend on room ambient temperature, the initial temperature of the wine being chilled, the bottle size (as related to surface contact area to the interior of the bucket), volume of wine in the bottle, and use of insulation sleeve.  
\* Starting temperature of approximately 73°F.

**CARE AND MAINTENANCE**

Always disconnect before cleaning. Wipe with a damp cloth, then dry. Do not use abrasive cleaning agents.

©2009 Waring Products  
Division of Conair Corporation  
150 Milford Road  
East Windsor, NJ 08520  
[www.waringpro.com](http://www.waringpro.com)

Printed in China  
PC200 IB  
08WR11368

IB-7664A